
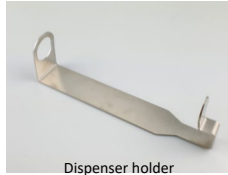


DHARMAZONE

Sweden

Installation instructions dispenser holder

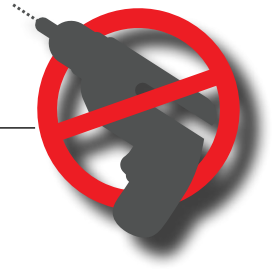

Dispenser holder



i.POWER glue (cartridge)



Cleaning Kit

Please find the instructions of how to fit a dispenser safely without making any holes to the wall. The glue used in the instructions is the POWER.mini. It is also available in 310ml cartridge for larger projects. The i.POWER glue has the advantage of a very high initial tac which holds the product directly to the wall without sliding. Its holding force after curing is also very high. We also show the use of a fixation plate used for easy installation and easy removal in case of need to replace the dispenser. The glue and fixation plate can be fully removed without leaving any residues on the tile surface.


Pretreatment




1. Prepare the surface of the fixation plate for gluing by scrubbing its glue area.



2. Wipe the surface clean with the cleaning cloth. Use the i.Cleaner spray first.

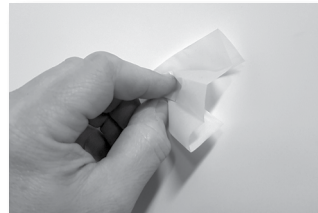

3. Clean the wall surface with the cleaning cloth. Remove eventual residues of silicone or similar before next step. Larger spots is easily cut away with a glass scraper. Use the sponge and i.Cleaner spray to ensure full removal of residues.

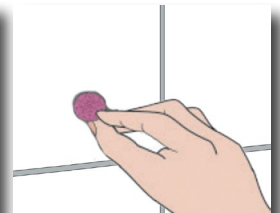

Fitting the holder



4. Apply the glue on the fixation plate. *)



5. To increase the speed of the curing of glue the glue moisture with a light spray (2xspray) of i.CLEANER before attached to the wall.



6. Fit the fixation plate against the wall. Make sure to press it hard and level the plate.



7. Wait approx. 4-6h for the glue to reach enough strength for load of dispenser and filling with product. The glue is fully cured after 24h.


*) 1 cartridge i.Power, is enough for approx 50 pcs holders.

Fitting the dispenser



8. Place the intended product in the holder.

Removal

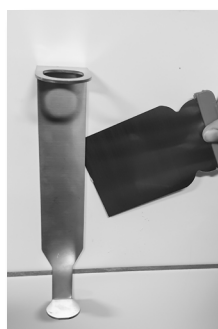

To remove the installed dispenser holder use a thin bladed spatula and cut the dispenser loose.



Remove the residues from the wall with a glass scraper and wipe the wall clean.